



Features:

- Three phase power regulator, auto phase detection
- Soft start function to protect SCR and load against surge current
- Integrated display with various LED indicator for status and error display
- Integrated heatsink and fans with temperature detection
- Over temperature alarm, output protection after alarm on
- Maximum and minimum output configurable
- Auto/manual control bumpless transfer
- Run/stop function
- RS-485 modbus RTU display
- 1 alarm with relay output(NO+NC), standard feature
- Rated load voltage 200~440Vac(+/-15%) 50/60Hz
- Power supply for SCR to work is 85~265Vac, 12~24VDC optional
- Input, 0~10Vdc, 4~20mA, 0~5Vdc, 1~5Vdc, 2~10Vdc, 0~20mA, 0~10mA
- Rated current options, 100 amps, 125 amps, 150 amps, 175 amps, 200 amps.
- This SCR only compatible with resistive load

Technical Specifications

Ordering Information

TC-200S **1** **2** **3** **4** **5**

Type of SCR power regulators

TC-200S Maxwell Power Regulator, TC-200S series

1:Power supply for the unit itself

2 85~265Vac 50/60Hz
D 12~24VDC

2:Load Voltage

2 3 phase 200V~240V(+/-15%)
4 3 phase 380V~440V(+/-15%)

3:Load amps

100 100A
125 125A
150 150A
175 175A
200 200A

4:Communication

N without communication
M With RS-485 modbus RTU communication

5:Input configuration

A03 4~20mA
V08 1~5VDC
V09 2~10VDC
A02 0~20mA
V03 0~5VDC
V04 0~10VDC

ITEM NO	Current	Load(3 phase)	
		220V star connection	380V delta connection
TC-200S-2-4-100-N-A03	100A	48KW	90KW
TC-200S-2-4-125-N-A03	125A	57KW	101KW
TC-200S-2-4-150-N-A03	150A	68KW	118KW
TC-200S-2-4-175-N-A03	175A	78KW	136KW
TC-200S-2-4-200-N-A03	200A	90KW	150KW

Remark: TC-200S-2-4-100-M-A03

TC-200S series

2: power source85~265Vac

4: 3 phase 200~440V +/-15% load

100: 100 amps


M: with RS-485 communication

A03: input is 4~20mA, 1~5VDC, 2~10Vdc

Cautions and notes

1. Fast fuse must be deployed in the system to protect SCR
2. SCR is not going to work if the load is less than 0.5A or without load
3. A lot of heat will be generated when SCR operates, the ambient temperature must be less than 500C, the integrated fans will be activated if temperature on the SCR heatsink greater than 60C, if the ambient more than 60C, additional fans must be installed in the control cabinet to help the cooling. otherwise the self-protection mechanism will be triggered and output will stop
4. The screw must be fastened securely on the input and output, otherwise excessive heat will be accumulated on the screw and result in damage of the SCR

Panel Description

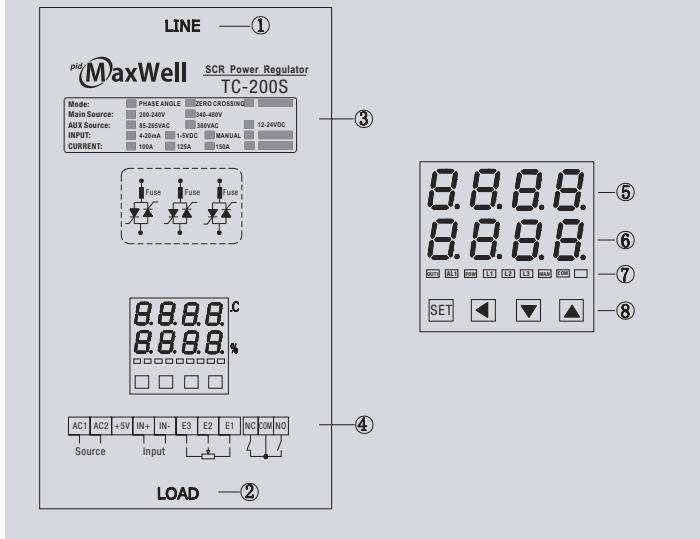

1:Load input

2:Load output

3:Specification

4:Terminals for connection

5:Temperature/parameter notation

6:SV,parameter value, input%

7:Various indicators

Out: output status

AL1:alarm for over temperature of lack of phase

L1:L1 line drop or fast fuse burn out

L2:L2 line drop or fast fuse burn out

L3:L3 line drop or fast fuse burn out

COM: communication indication

8: Set button


SET, function key, set key

◀: shift key


▼:decrement key

▲:increment key

Connection diagram

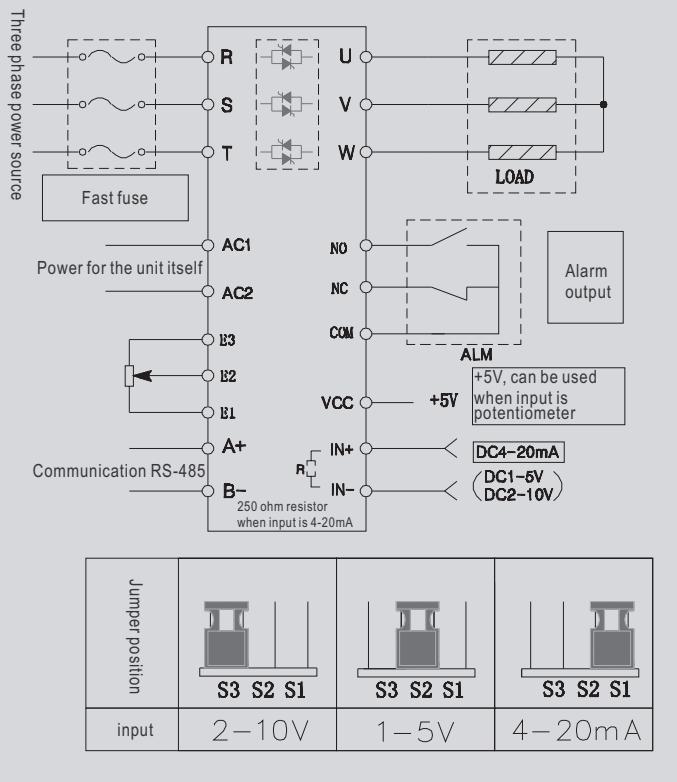

Size and dimension

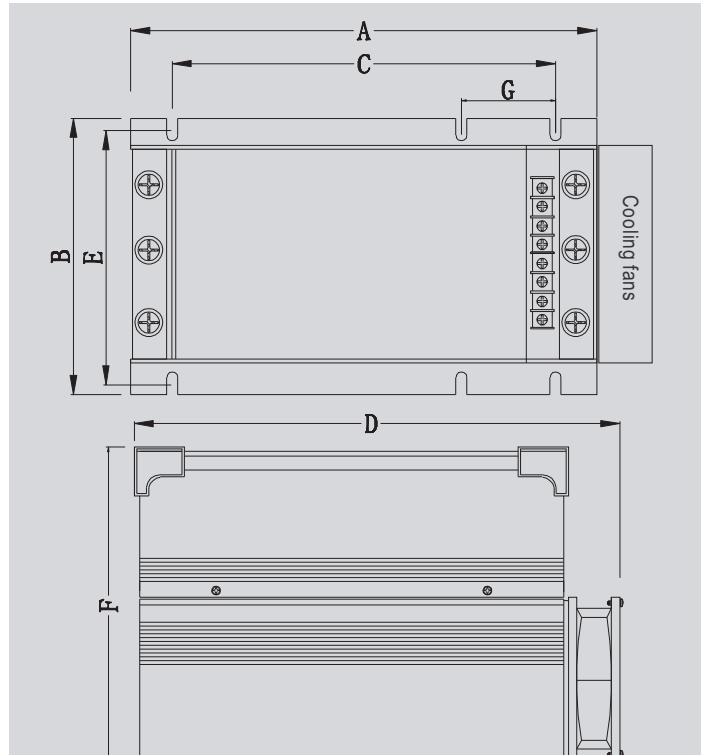


Item No	Specification						
	Unit(MM)						
	A	B	C	D	E	F	G
TC-200S-2-4-100-N-A03	210	150	160	255	132	206	
TC-200S-2-4-125-N-A03	250	150	200	295	132	206	
TC-200S-2-4-150-N-A03	250	150	200	295	132	206	
TC-200S-2-4-175-N-A03	300	150	250	345	132	206	50
TC-200S-2-4-200-N-A03	300	150	250	345	132	206	50

Wiring instructions for different functions

There are different ways to wire the SCR for different application, please check carefully on this part before using


- (1) Analog input(mA, mV), and output ratio external adjustable, for example, can manually adjust the output from 0%~100%

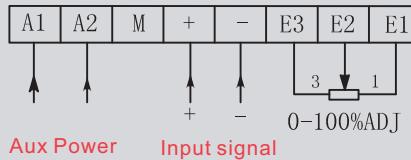

>Output ratio external adjustable(0%-100%)

>The output ratio will always be 100%
When short circuit E3 and E2


- (2) Dry contact input, and output ratio external adjustable, for example, can manually adjust the output from 0%~100%

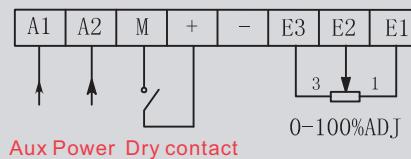


>Output ratio external adjustable(0%-100%)

>The output ratio will always be 100%
When short circuit E3 and E2


- (3) Analog input(mA, mV), manual/auto control switchable, output ratio external adjustable, this wiring pretty much the same as type (1) the difference is the manual/auto control is switchable in this mode

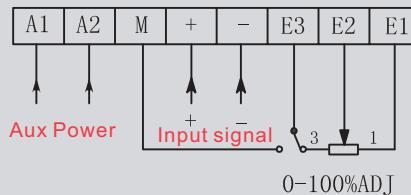

- (4) Analog input(mA, mV), Minimum output ratio can be pre-determined regardless of the input signal, even if input signal is "0" the SCR output will be restrained at its preset value.

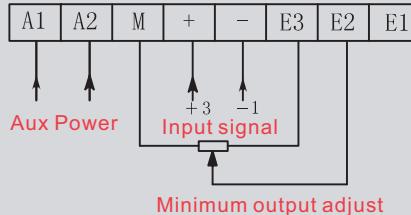



- (5) Analog input(mA, mV), Minimum and maximum output ratio can be restrained within a range. The SCR output will not response to input signals if input signals drives the output out of the preset ranges. The SCR will work within a range for example 30%~80%

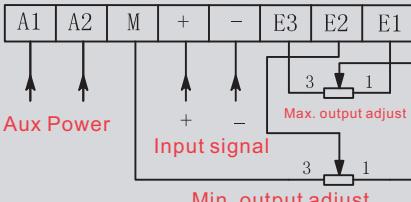


When maximum and minimum output set as the same value.
SCR output be fixed, and will not respond to the input signal

Wiring instructions for different functions



(6) Analog input (mA, mV), several SCR units connected together, with one of the units output ratio adjustable(0%-100%)

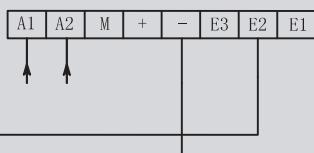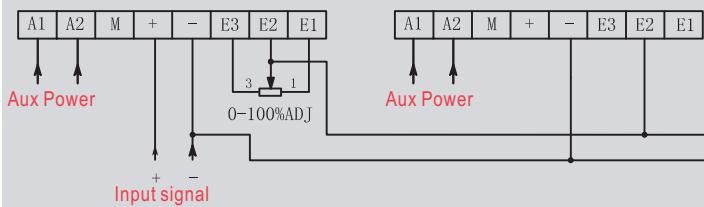

(7) Analog input (mA, mV), several SCR units connected together, with one of 4-20mA input, other units 1-5VDC input, maximum 4 SCR units can be connected, all units output ration adjustable

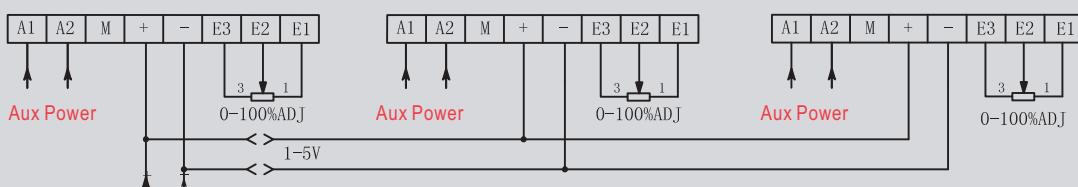

(8) Analog input (mA, mV), serial connect 2 SCR units together, 2 SCR units controlled by same signals maximum 2 SCR units can be connected, all units output ration adjustable

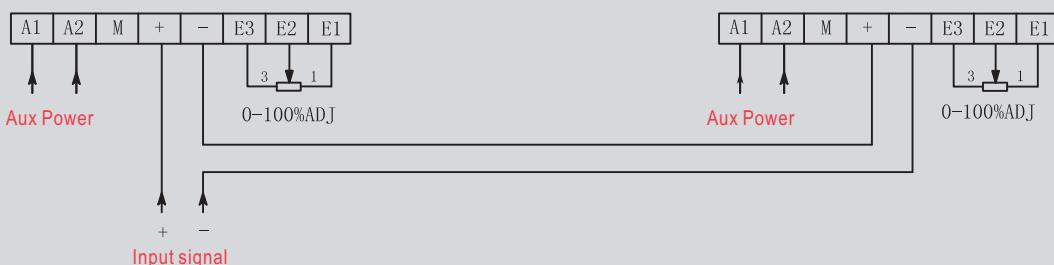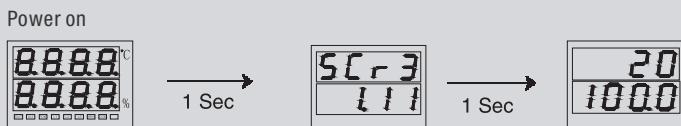**Setting and configuration**

Press SET once to enter into configuration menu

